

# ROSETTE MOUNTING INSTRUCTIONS FOR PRESTON-STYLE MICROFORCE HANDSET CONTROL

Step 1: Remove microforce top cover plate from microforce control unit. **Disconnect all wires and remove on/off and/or zoom-direction switch from plate.**


Step 2: Secure microforce top cover plate on a flat surface with inside portion of plate facing up, oriented as shown in diagram.

Step 3: Drill and counter-sink (4) equally spaced holes through microforce top cover plate. Follow diagram for hole placement dimensions.

Step 4: Once holes are drilled, use a #1 phillips-head screwdriver to fasten aluminum riser disk to outside of microforce cover plate with 10mm dia. counter-bore hole on riser disk facing out. Use (4) 3mm x 8mm flat head machine screws provided.

Step 5: Fasten rosette to aluminum riser disk with (4) 3mm x 8mm flat head machine screws provided. Loctite or similar thread-locker is recommended to ensure that the screws do not loosen over time.

For safety and stability, check all connections **including wires** before use.

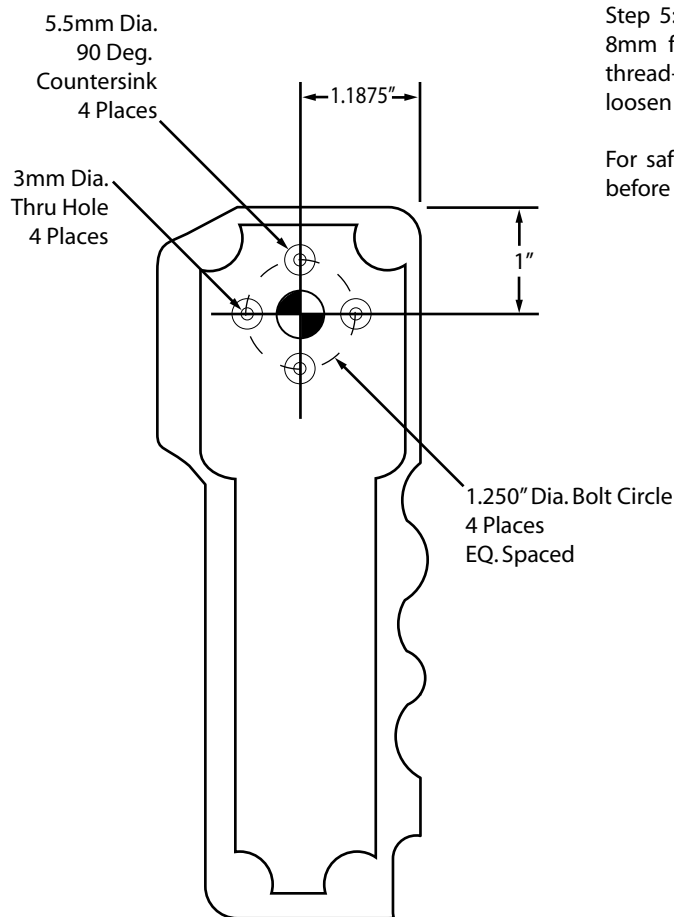

MICROFORCE TOP COVER PLATE